

## ELECTRIC SHARPENING


1. Power on the sharpener.

**MODEL E2:** Press 


**MODEL E2P:** Press **SHARP** to sharpen knives.

Press **SHAPE** restore extremely dull knives.

2. Set knife in sharpener.

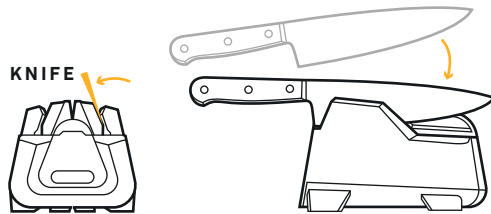

3. Pull through slowly.

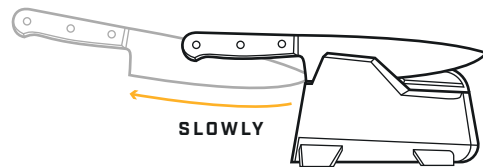

4. Repeat on the opposite side. Continue alternating sides until machine shuts off.




## MANUAL SHARPENING

1. Insert blade into center slot.




2. With gentle downward pressure, slide the knife back and forth along the full length of the blade 10 times.

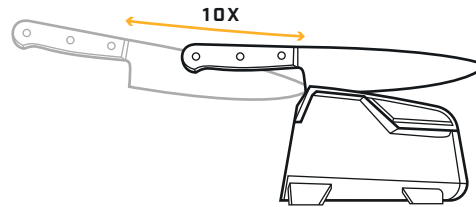

## REMOVING / CHANGING ANGLE GUIDE


Remove the guide to sharpen scissors, change abrasives, or attach the Pocket Knife Guide included with Model E2P.

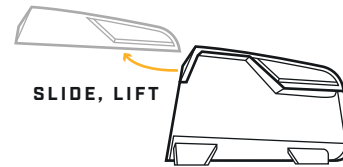

## CHANGING ABRASIVES


First, remove the guide and open top cover. Remove o-ring and unscrew fastener holding abrasive in place. Abrasives are reversible.

After each use, wipe the inside & outside of your sharpener with a dry cloth to remove any grinding dust that may have accumulated.

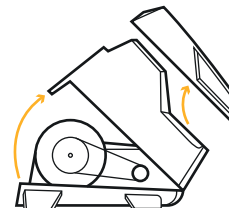


## SHARPEN SCISSORS

Remove the guide. Set sharpener to lowest speed. Rest blade on the scissor guide and pull thru slowly. Repeat 2-5 times per side.

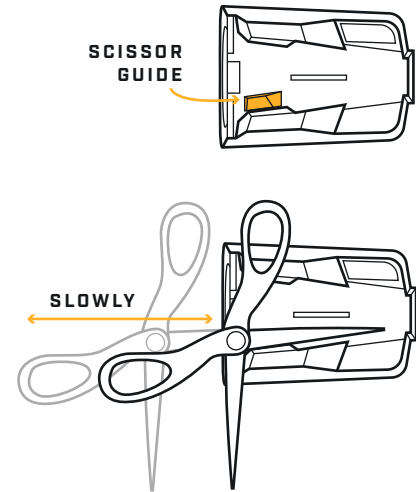

## SHARPEN SERRATIONS

1. Insert blade into center slot.

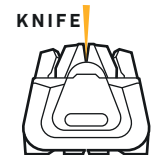

2. With gentle downward pressure, slide the knife back and forth along the full length of the blade 10 times.

